


YOU WILL NEED

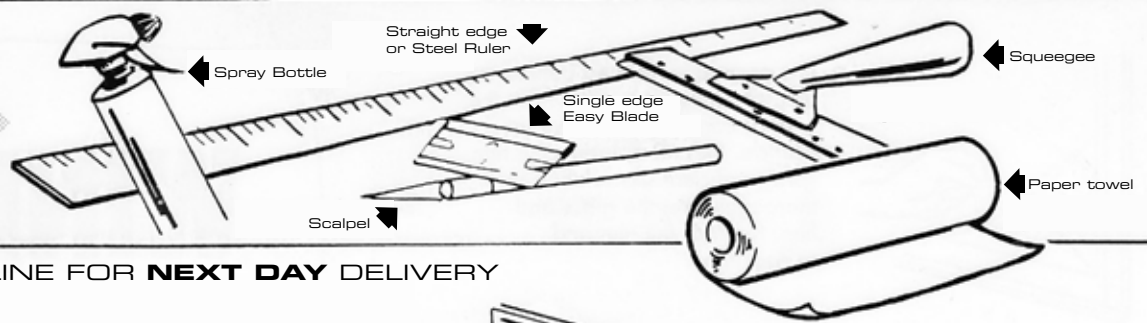

ORDER ONLINE FOR **NEXT DAY** DELIVERY

1 WINDOW PREPERATION

1. Make up slip solution in spray bottle (1 tsp washing up liquid to 1 pint cold water).
2. Place damp newspaper or a cotton cloth beneath the glass to be covered with 'window film'. Thoroughly wash glass with slip solution and squeegee dry.
3. Remove paint, varnish or other foreign matter with a scraper
4. Spray with slip solution and sqqueegee out, checking that the glass surface is very clean and dust free




3. Carefully reverse film on to glass so that adhesive side is now in contact with the glass.

Note: Keep film straight, do not allow film to curl up on itself or to wrinkle. A crease or wrinkle will not flatten out on application.




2 FILM HANDLING

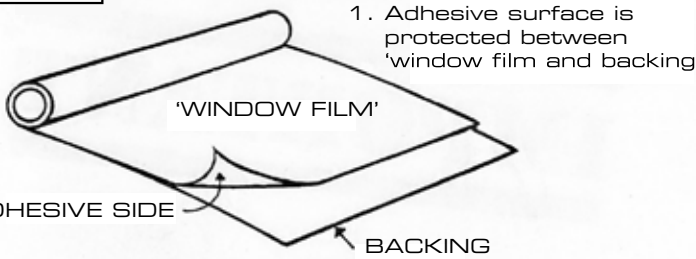

1. Adhesive surface is protected between 'window film and backing

2. 'Window film' may be cut to approximate size with a very sharp easy blade. It is recommended that the film be cut at least 25mm longer and wider than the glass. You are now ready to apply film to the glass.


Note: Separate a corner of the 'window film' with 2 small pieces of tape on either side of the product.

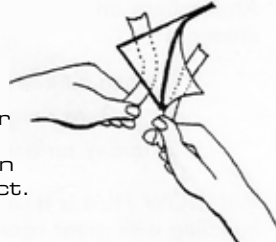

4. Position film by gently sliding on wet surface and smoothing out large air bubbles. Ensure all glass area is covered by film.

4 SQUEEGEE TECHNIQUE

1. Squeegee angle should be high, as shown, to prevent scratching the film, only use rubber squeegee never cloth or sponge

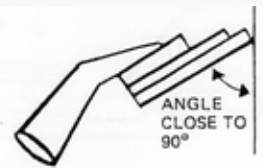

2. Wet film with slip solution to give slip for the squeegee

3 FILM APPLICATION




1. Thoroughly wet glass with slip solution




2. Place film on glass with backing facing you. From the ready separate corners carefully, peel off the backing. Spray the adhesive surface generously with slip solution (you cannot apply to much solution)

3. The first stroke should be horizontal across the top of the window

4. The next stroke should be downwards from one edge with succeeding strokes working across the window from one end to the other until all excess water is removed

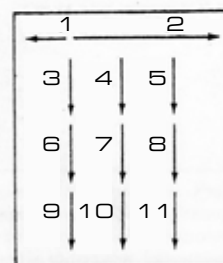

5. On the final squeegee of the top and bottom edges the squeegee may be pushed towards the edge to remove excess water.

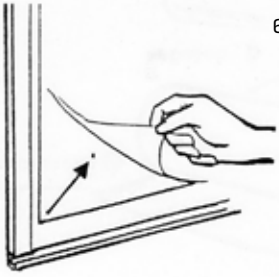

6. If a particle is trapped behind the film, carefully lift the film from the nearest corner and remove the particle. Before replacing the film spray sufficient slip solution to thoroughly wet glass and film. Replace film and re-squeegee.

5


FILM TRIMMING

1. Using a straight edge, or steel rule, carefully place on film on end at the edge of the window.
2. Trim the film using single edge easy blade so that there is a margin width of 5-8mm.
3. Repeat this for each edge of the window.



4. After trimming, remove excess film
5. Repeat entire squeegee process. A firm pressure is necessary to effect a strong bond

6. When trimming and final squeegeeing is completed wrap a paper towel over edge of squeegee and carefully and completely tamp dry edges of film.

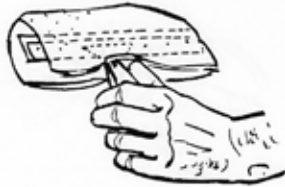

WINDOW FILM

Fitting made Easy

IMPORTANT!

PLEASE READ THOROUGHLY BEFORE UNPACKING OR HANDLING FILM

Applications are NOT RECOMMENDED in the following situations:

1. when outside temperatures are below 0°C
2. to rough or cast glass surfaces
3. to any surfaces that curves in two directions.

WINDOW FILM is a very thin sheet of material that requires handling with great care. Creases and folding must be avoided and applications need to be carried out in a draught and dust free situation.

PREPARATION AND PRE-CLEANING are vitally important and care must be taken to flush any dirt particles out of the window frame. Some airborne dust may get under the film, but this is difficult to avoid completely and its presence will not affect the performance of the installation.

DURING DRYING OUT some haziness will be evident and this will disappear and dry out over a 2-3 week period.

CLEANING as for normal windows, after 4 weeks & always with a soft leather or cloth and clean water.

PATTERNED GLASS in the case of patterned glass apply the film only to the smooth surface.

INTERNAL GLASS the product can be applied to either side.

NOTE: Where applicable, film certified to BS6206 1981.



THE WHOLESALE GLASS CO.

0208 664 3768

FOR GREAT OFFERS ON WINDOW FILM & APPLICATION TOOLS VISIT OUR ONLINE STORE WWW.WHOLESALEGLASSCOMPANY.CO.UK

Important note to customer: Seller's & manufacturer's only obligation shall be to replace such quantity of the product proved to be defective. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential arising out of the use of or the inability to use the product.